

MASTER INDEX.....01
GEN INFO
WARRANTY
PLATE.....01
ALPHA INDEXES
ACCESS.....02
CHASSIS.....02
PATNT.....02
WHEEL-BRAKE
1000.....03
P/L 11.1.....03
P/L 11.2.....04
2000.....04
2201.....05
2300.....07
20.1 F/BRK.....05
22.1 R/BRK.....06
23.1 BSTR.....07
24.1 P/BRK.....08
ILLUS.....09
FRY AXLE STR
3080.....14
35.1 S/GEAR.....15
35.2 P/S CYL.....15
3600.....15
ILLUS.....16
CHASSIS
4000 - 5999
TRANS #2
CHASSIS
6000 - 9999
TRANS #3
CHASSIS
10000-19999
BODY SOFT
TRIM
CROSS REF
TRANS #4
ISS APPEARS
IN
FPS B473-M

PART NAME		GROUP NUMBER	PART NAME		GROUP NUMBER
INDEX					
Notes: Refer to page 1 of Parts Section			S - Cont'd		
S - Cont'd					
Spacer (disc wheel hub)	14814	Spacer (rear suspension center bushing)	54977		
Spacer (distributor and governor housing of seat)	14817	Spacer (rear wheel parking brake fork/rod to frame)	54750		
Spacer (oil, wiper/drain drive)	48750				
Spacer (oil, cylinder) gear or sprocket)	4881	Spacer (steering drive axle)	17288		
Spacer (oil, transmission)	4476	Spacer (steering motor)	11404		
Spacer (oil, front/rear reinforcing plate)	4575	Spacer (steering motor armature)	11401		
Spacer (oil, front support) insulator)	4406	Spacer (steering motor ground brush holder)	11402		
Spacer (oil, support) insulator)	4407	Spacer (steering motor insulator brush holder)	11403		
Spacer (oil, valve spring)	4573	Spacer (steering gear holding)	54572		
Spacer (front axle driving spring bearing flange)	4863	Spacer (steering gear to frame)	5066		
Spacer (front axle driving spring bearing retainer)	4877	Spacer (throttle cable bracket)	9620		
Spacer (front axle spindle bearing)	4879	Spacer (throttle control bracket)	9620		
Spacer (front hub spacer) retainer)	3117	Spacer (throttle ass. countershaft bearing)	7125		
Spacer (front spring bracket)	4870	Spacer (trans. ass. shift drive gear)	7113		
Spacer (front spring bolt)	5478	Spacer (trans. control lever)	7607		
Spacer (front spring to axle)	54113	Spacer (trans. control selector lever mounting bracket)	7150		
Spacer (front wheel inner bearing)	3113	Spacer (trans. countershaft drive gear)	7115		
Spacer (front wheel support)	48643	Spacer (trans. countershaft gear pilot bearing)	7115		
Spacer (headlamp switch)	15125				
Spacer (rear axle)	48752	Spacer (trans. gearshift rod)	7129		
Spacer (trans. mounting)	1702	Spacer (trans. input shaft)	7127		
Spacer (wiper)	3571	Spacer (trans. input shaft bearing)	7963		
Spacer (parking brake lever to frame)	24750	Spacer (trans. input shaft bearing to inner race)	7963		
Spacer (P/S control valve) (driving spring)	35714	Spacer (trans. input shaft gear)	7526		
Spacer (P/S cyl. mounting) shaft)	35716	Spacer (trans. mounting)	7002		
Spacer (P/S ass. actuator)	35717	Spacer (trans. oil filter cover)	7462		
Spacer (P/S gear piston) pilot) shaft)	35719	Spacer (trans. output shaft)	7820		
Spacer (P/S pump adjuster) shaft)	35720	Spacer (trans. output shaft bearing)	7115		
Spacer (P/S pump mounting)	3642	Spacer (trans. output shaft gear)	7173		
Spacer (pilot) to fan)	4846				
Spacer (indicator)	84405	Spacer (trans. output shaft needle bearing)	74074		
Spacer (indicator grille) (indicate side panel mounting)	84326				
Spacer (indicator guard) (bolt to frame)	84327-4	Spacer (trans. output shaft) rear bearing)	7072		
Spacer (indicator guard to cross member)	5667	Spacer (trans. output shaft) reduction gear)	74074		
Spacer (indicator shaft) (bolt to frame)	5672	Spacer (trans. output shaft second speed gear bearing)	7072		
Spacer (indicator to front axle/shaft)	84346				
Spacer (rear axle differential) (rear axle bearing)	4578	Spacer (trans. rear countershaft)	7072		
Spacer (rear axle differential) (rear axle bearing)	4577	Spacer (trans. rear axle) cable bracket)	7077		
Spacer (rear axle differential) (rear axle bearing)	4582	Spacer (trans. reverse idler gear bearing)	7481		
Spacer (rear axle differential) (rear axle bearing)	4583	Spacer (trans. reverse idler gear shaft)	7482		
Spacer (rear axle driving pinion bearing)	4577	Spacer (trans. reverse idler gear shaft)	7482		
	4578	Spacer (trans. shift fork shaft)	74716		
	4662	Spacer (trans. shift rod)	74716		
Spacer (rear axle housing front) bearing)	14811	Spacer (trans. throttle pressure valve assembly)	71027		
Spacer (rear axle stabilizer bar) (pin)	44342	Spacer (transfer case) (gear shaft) shaft)	74079		
Spacer (rear axle) (brake arm) (bracket)	44002	Spacer (transfer case input shaft)	74079		
Spacer (rear axle) (bracket)	134429	Spacer (transfer case) indicator)	7064		
Spacer (rear shock absorber bracket) to axle member) rear)	38199	Spacer (transfer case) indicator)	134298		
Spacer (rear shock absorber) rear)	1044	Spacer (transfer case) indicator)	88200		
Spacer (rear spring) (chain)	5731	Spacer (transfer case) indicator)	144464		
Spacer (rear spring) (hanger)	5732	Spacer (trans. ass. oil filter adjuster)	64713		
Spacer (rear spring) (post)	54565	Spacer (trans. ass. rear) (arm)	5729		
Spacer (rear spring) (rod of seat)	54559	Spacer (trans. ass. (brake) roller)	14460		

APRIL 1980

Copyright © 1980

SAE MOTOR

— BILLYBROS, MISSOURI

NEW ISSUE

ROW 02	ACCESSORIES		CHASSIS ALPHA INDEX								PATNTS INDEX
	A.....02	E.....15	I.....23	N.....25	R.....30	V.....47	W.....48	Y.....50	INDEX		
.....01	B.....03	F.....16	J.....24	O.....26	S.....34	X.....48		51		
	C.....10	G.....17	K.....24	P.....27	T.....44	U.....50					
	D.....09	H.....21	L.....24	Q.....27	U.....47						