

MASTER INDEX.....01
GEN INFO WARRANTY PLATE.....01
ALPHA INDEXES ACCESS.....02
CHASSIS.....02
PATRY.....02
WHEEL-BRAKE
1000.....03
P/L 11.1.....03
P/L 11.2.....04
2000.....04
2200.....05
2300.....05
20.1 F/BRK.....07
22.1 R/BRK.....06
23.1 BSTR.....07
26.1 P/BRK.....08
ILLUS.....09
FRT AXLE STR
3000.....14
35.1 S/GEAR.....15
35.2 P/S CYL.....15
3600.....15
ILLUS.....16
CHASSIS
4000 - 5999 TRANS #2
CHASSIS
6000 - 9999 TRANS #3
CHASSIS
10000-19999 BODY SOFT TRIM
CROSS REF TRANS #4
ISO APPEARS IN FPS B473-M

INDEX		INDEX	
PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Notes: A Refer to page 1 of Paint Section			
W — Cont'd		W — Cont'd	
Washer (trans. countershaft rear bearing retainer)	7026	Wedge (rear axle spring seat)	4306-7, 5433
Washer (trans. countershaft retainer)	7128	Wedge assy. (front air brake actuating)	20200
Washer (trans. countershaft thrust)	7131	Wedge assy. (rear air brake actuating)	20202
Washer (trans. front pump support thrust)	7054	Wedge actuated brake release kit	30124
Washer (trans. input shaft thrust)	7056	Wedge (dash. pump discharge ball)	40511
Washer (trans. intermediate brake drum thrust)	7056	Weight (distributor assy. governor)	12498
Washer (trans. main shaft thrust)	7119	Weight (cam. governor)	30128
Washer (trans. mainshaft intermediate drive gear and aux. sliding clutch)	7113	Weight (trans. governor cover balance)	7013
Washer (trans. output shaft bearing)	7029	Weight (wheel balance)	1020
Washer (trans. output shaft first speed gear thrust)	7071	Weight assy. (distributor)	12128
	7119	Weight & locking assy. (distributor assy. governor)	12497
	7123	Wheel assy.	1001
Washer (trans. output shaft first, second and reverse)	7123	Wheel assy. (A/C booster motor)	12024
Washer (trans. output shaft fourth speed gear thrust)	7069	Wheel assy. (alternator)	3020
Washer (trans. output shaft hub thrust)	7042	Wheel (distributor shaft)	12131
Washer (trans. output shaft nut)	7026	Window kit (sliding back)	42030
Washer (trans. output shaft second speed gear)	7056	Wire assy. (rear axle shaft)	1174
Washer (trans. output shaft second speed gear thrust)	7056	Wire	4276
Washer (trans. output shaft third speed gear thrust)	7029	Wire (dash. alternator dashboard cover seat)	4920
	7033	Wire assy. (alternator rectifier)	10207
	7056	Wire assy. (backing lamp switch extension)	12426
	7064	Wire assy. (body main extension)	14433
	7071	Wire assy. (brake moisture section valve)	20250-4
	7117	Wire assy. (brake warning lamp)	10245
	7123	Wire assy. (brake warning lamp exterior)	10234
	7826	Wire assy. (charge indicator)	10246
	7436	Wire assy. (clear lighter for fuse panel)	10246
Washer (trans. output shaft thrust 1960)	7128	Wire assy. (courtesy lamp)	12671
Washer (trans. output shaft thrust 1960)	7128	Wire assy. (courtesy lamp feed)	12672
Washer (trans. reverse idler gear bearing thrust)	7029	Wire assy. (dash panel to aux. wiper feed)	12599
Washer (trans. reverse idler gear thrust)	7128	Wire assy. (dash panel to headlamps function)	12570
	7123	Wire assy. (distributor brake ground)	12384
Washer (trans. reverse gear)	7067	Wire assy. (distributor primary terminal)	10219
Washer (trans. reverse gear thrust)	7128	Wire assy. (distributor to spark plug radio resistance)	12286
Washer (trans. reverse idler drive)	7067	Wire assy. (drive lamp ground)	12424
Washer (trans. output shaft bearing)	11288	Wire assy. (lamp block heater)	40070
Washer (trans. tailshaft rear bearing)	11288	Wire assy. (lamp wiper jumper)	14421
Washer (transfer case direct drive gear)	7067	Wire assy. (lug lamp)	12421
Washer (transfer case input shaft bearing)	7067	Wire assy. (lug wiper last unit ground)	14175
Washer kit (brake air chamber)	20488-9	Wire assy. (fuel valve feed)	90200
Washer kit (trans. output shaft)	7123	Wire assy. (heater switch to fuse panel)	14322
Washers	A	Wire assy. (horn)	12666
Wear shoes & oil seal kit (forward axle input shaft)	44279	Wire assy. (horn jumper)	12480
Wear shoes & oil seal kit (forward axle output shaft)	44278	Wire assy. (horn relay)	14300
Wear shoes & oil seal kit (rear axle input shaft)	44626	Wire assy. (ignition coil)	14420
Weatherstrip (front fender to wheelhouse)	16271	Wire assy. (ignition coil resistor)	12226
Weatherstrip (radiator splash rear shield)	80050	Wire assy. (ignition circuit amplifier extension)	10245
Weatherstrip (radiator splash rear shield side)	80043	Wire assy. (ignition feed)	14513
Wedge (air brake actuating)	20200	Wire assy. (ignition jumper)	12060
Wedge (brake shoe actuating)	20201	Wire assy. (instrument cluster)	9072
Wedge (brake shoe heel repair kit)	20202	Wire assy. (instrument cluster resistor before release)	10027
Wedge (front axle spring seat)	5433		

ROW OR INDEX	ACCESSORIES	CHASSIS ALPHA INDEX				PATRY
ALPHA INDEX	A.....02	E.....15	J.....23	M.....25	R.....30	V.....47
.....01	B.....03	F.....16	K.....24	N.....26	S.....34	W.....48
	C.....10	G.....17	L.....24	O.....26	T.....44	Y.....50
	D.....14	H.....21	P.....27	U.....47		