

ALPHABETICAL INDEX CHASSIS PARTS 1980/  
 TRUCK SERIES 600/900

## INDEX

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Notes: A - Refer to page 1 of Part Section			
B - Cont'd		B - Cont'd	
Bracket, fender clip	74426	Bracket, assy, starter relay mounting	119002
Bracket, fender shield	74427	Bracket, assy, starting relay support	18139
Bracket, assy, accelerator cable	9723	Bracket, assy, throttle control relay	96773
Bracket, assy, accelerator to shift housing	94680	Bracket, assy, (10) cab locking cable	5312
Bracket, assy, IACV control mounting	734884	Bracket, assy, (10) air	170704
Bracket, assy, (air cleaner, intake plenum)	76930	Bracket, assy, (lower lamp plug bracket)	13684
Bracket, assy, (low beam mounting front & rear)	74020	Bracket, assy, (trans. end shift cable)	71581
Bracket, assy, (brakes cable)	109452	Bracket, assy, (trans. indicator control cable lever)	7928
Bracket, assy, (brake booster lever plate)	28211	Bracket, assy, (trans. indicator mounting)	136223
Bracket, assy, (brake chamber)	2212-1	Bracket, assy, (brake shoe mounting)	144226
Bracket, assy, (brake shoe control sensor)	22084	Bracket, & rivet, assy, (brake shoe)	3260
Bracket, assy, (brake hose manifold)	28137	Bracket, & rivet, assy, (brake storage control)	90644
Bracket, assy, (cab to frame suspension arm)	2408	Bracket, & rivet, assy, (brake lamp)	21520
Bracket, assy, (cab mounting to spring)	28424	Bracket, & rivet, assy, (brake booster tube)	28203
Bracket, assy, (cab mounting bracket)	28279	Brake, (indicator motor shaft)	114018
Bracket, assy, (cable air stream support)	96376	Brake, assy, (lower wheel)	2297-30
Bracket, assy, (cable, choke control)	9295	Brake, adjuster bolt, (right) (1) (trans. air)	2795
Bracket, assy, (cable, throttle control)	9754	Brake, adjuster mounting washer kit, (lower air)	2136
Bracket, assy, (cylinder roller ball joint lever plate)	79387	Brake, adjusting screw kit, (rear air)	2042
Bracket, assy, (cylinder roller ball joint lever)	74572	Brake, cylinder repair kit	2128
Bracket, assy, (long, roller wheel)	66705	Brake, repair kit, (front wedge actuator air)	28200
Bracket, assy, (shorter)	94430	Brake, repair kit, (rear wedge actuator air)	28214
Bracket, assy, (brake air supply tube)	92488	Brake, assy, (indicator)	12151
Bracket, assy, (brake air gas regulator)	94432	Brake, assy, (indicator circuit)	14526
vacuum amplifier		Brake, assy, (indicator circuit glass tube)	14526
Bracket, assy, (frame to body)	34112-3	Brake, assy, (linking link (2) top)	14526
Bracket, assy, (front bumper)	178749-58	Brake, (lower assy, shaft bearing)	4022
Bracket, assy, (front frame position)	52206	Brake, (indicator motor)	11056
Bracket, assy, (front shock absorber lever)	18112-3	Brake, (air indicator motor)	11057
Bracket, assy, (front shock absorber to frame upper)	18183-4	Brake, & holder, (IACV compressor)	2979
Bracket, assy, (fuel filter)	94335	Brake, & spring, (air, (alternator))	10247
Bracket, assy, (fuel tank)	8845-6	Brake, & terminal, assy, (interlocking edge motor)	178546
Bracket, assy, (fuel tank compression member)	94125	Brake, & terminal, (air, (alternator))	20247
Bracket, assy, (fuel tank leveling base support)	94081	Brk, (lamp)	13465-4
Bracket, assy, (fuel junction panel, (mounting))	144798	Brk, assy, (headlamp beam beam)	13007
Bracket, assy, (head, (throttle control))	96734	Brk, (air, (brake, lower beam))	25220
Bracket, assy, (headlamp, adjusting nut)	13021	Brk, (lower beam)	25130
Bracket, assy, (ICR radio speaker relay mounting)	28824	Brk, & retainer, (headlamp, (lamps))	136022
Bracket, assy, (indicator, (lower mounting))	28235	Bumper, (shield, & brake pedal)	7983
Bracket, assy, (indicator control mounting)	28231	Bumper, (floor)	17757
Bracket, assy, (indicator mounting)	28456	Bumper, (floor, (air))	2615-28
Bracket, assy, (floor, (spring, (retainer))	140326-7	Bumper, (floor, (spring))	5460
Bracket, assy, (floor, (10))	142438-9	Bumper, (floor)	16758-43
Bracket, assy, (floor, (pulley, warning))	84403	Bumper, (rear, (air))	4794
Bracket, assy, (indicator, warning system control)	109946		1780
Bracket, assy, (indicator grille opening side panel mounting)	84214	Bumper, assy, (cab mounting, (rear))	34120
Bracket, assy, (inlet, (supply, (air, (mounting))	84882	Bumper, assy, (hood, (top))	14038-7
Bracket, assy, (inlet, (suspension, (shield))	14134	Bus, bar, (fuel junction panel)	144256
Bracket, assy, (lower, (brake, shoe, anchor))	24977-8	Bus, bar	144439
Bracket, assy, (lower, (lamp, to, (frame))	12403	Bus, bar, (link to, (circuit, breaker))	144258
Bracket, assy, (lower, (shock, absorber, upper))	18241	Bus, bar, (air)	144033
Bracket, assy, (lower, (mounting))	14432	Butting, (accelerator, pedal, (brake))	9673
Bracket, assy, (lower, (control, sensor))	92787	Butting, (accelerator, pedal, (lower, plate))	96285
Bracket, assy, (lower, (light))	25320	Butting, (accelerator, (shaft))	94743
Bracket, assy, (stabilizer, air, (body, mounting, plate))	14290-1	Butting, (alternator, mounting)	108220
Bracket, assy, (starter, motor, (air, (lower, mounting))	118200-1	Butting, (alternator, (shaft))	108213
		Butting, (alternator, (rotor, (brake))	104261

ROW OR INFO	GEN INFO		CHASSIS ALPHA INDEX													
	GEN INFO	ACCESS ALPHA ILLUS INDEX	A...09	E...23	J...30	M...33	R...38	V...55	B...10	F...23	G...24	K...31	O...34	T...52	W...56	Y...59
01	08	02	09	23	30	33	38	55	10	23	24	31	34	52	56	59